

# Instruction and Operation Manual

# S120

## Oil Vapor Monitor



Dear Customer,

Thank you for choosing our product.

Before you start up the device, please read this manual in full and carefully observe instructions stated. The manufacturer cannot be held liable for any damage that occurs as a result of non-observance or non-compliance with this manual.

Should the device be tampered with in any manner other than a procedure that is described and specified in the manual, the warranty is void and the manufacturer is exempt from liability.

The device is designed exclusively for the described application.

SUTO offers no guarantee for the suitability for any other purpose. SUTO is also not liable for consequential damage resulting from the delivery, capability or use of this device.


## Table of Contents

1	Safety instructions.....	5
2	Registered trademarks.....	7
3	Application.....	8
4	Features.....	8
5	Technical data.....	9
5.1	Measuring parameter.....	9
5.2	General data.....	9
5.3	Electrical data.....	10
5.4	Output signals.....	10
6	Dimensional drawing.....	11
7	Installation .....	12
7.1	Installation requirements.....	12
7.2	Wall mounting instructions .....	12
7.3	Installation procedure.....	14
7.3.1	Installation requirements.....	14
7.3.2	Installation steps.....	16
7.4	Electrical connection.....	17
7.4.1	USB port.....	17
7.4.2	RJ-45 connector.....	17
7.4.3	M12 connectors.....	17
8	Configuration .....	20
8.1	Integrated display.....	20
8.2	External display device .....	20
8.3	Service kit.....	20
9	Operations using the integrated display.....	21
9.1	User interface .....	21
9.1.1	Main screen.....	21
9.1.2	Quick buttons.....	22
9.1.3	Status bar.....	22
9.2	Main menus.....	23
9.3	Sensor settings .....	24
9.3.1	Basic setting.....	24
9.3.2	Analog output .....	25
9.3.3	Alarm settings.....	25
9.3.4	Status.....	26
9.4	Logger settings.....	26
9.5	Files.....	27
9.6	Service info .....	27
9.7	System settings .....	28
9.8	Communication .....	29
9.8.1	Modbus/RTU settings.....	29

---

9.8.2 Modbus/TCP settings.....	30
10 Troubleshooting.....	31
10.1 LED indicators.....	31
10.2 Error indications.....	32
11 Signal outputs.....	33
11.1 Analog output .....	33
11.2 Modbus Interface .....	33
11.3 Alarm output .....	36
12 Optional accessories.....	37
12.1 Sensor display.....	37
12.2 Service kit .....	37
13 Calibration.....	37
14 Maintenance.....	37
15 Disposal or waste.....	38
16 Warranty.....	38

## 1 Safety instructions

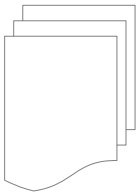

**Please check if this instruction manual matches the product type.**

Please observe all notes and instructions indicated in this manual. It contains essential information which must be observed before and during installation, operation and maintenance. Therefore this instruction manual must be read carefully by the technician as well as by the responsible users and qualified personnel.

This instruction manual must be available at the operation site of the oil vapor sensor at any time. In case of any obscurities or questions, regarding this manual or the product, please contact the manufacturer.



### **WARNING!**

#### **Compressed air!**

**Any contact with quickly escaping air or bursting parts of the compressed air system can lead to serious injuries or even death!**

- Do not exceed the maximum permitted pressure range (see sensors label).
- Only use pressure tight installation material.
- Avoid that persons get hit by escaping air or bursting parts of the instrument.
- The system must be pressure-less during maintenance work.



### **WARNING!**

#### **Voltage used for supply!**

**Any contact with energized parts of the product, may lead to an electrical shock which can lead to serious injuries or even death!**

- Consider all regulations for electrical installations.
- The system must be disconnected from any power supply during maintenance work.
- Any electrical work on the system is only allowed by authorized qualified personal.

**ATTENTION!****Permitted operating parameters!**

**Observe the permitted operating parameters, any operation exceeding this parameters can lead to malfunctions and may lead to damage on the instrument or the system.**

- Do not exceed the permitted operating parameters.
- Make sure the product is operated in its permitted limitations.
- Do not exceed or undercut the permitted storage and operation temperature and pressure.
- The product should be maintained and calibrated frequently, at least annually.

**General safety instructions**

- It is not allowed to use the product in explosive areas.
- Please observe the national regulations before/during installation and operation.

**Remarks**

- It is not allowed to disassemble the product.

**ATTENTION!****Measurement values can be affected by malfunction!**

**The product must be installed properly and frequently maintained, otherwise it may lead to wrong measurement values, which can lead to wrong results.**

**Storage and transportation**

- Make sure that the transportation temperature of the device is between  $-30 \dots +70^{\circ}\text{C}$ .
- For transportation it is recommended to use the packaging which comes with the device.
- Please make sure that the storage temperature of the device is between  $-20 \dots +50^{\circ}\text{C}$ .
- Avoid direct UV and solar radiation during storage.
- For the storage the humidity must be  $<90\%$ , no condensation.

## 2 Registered trademarks

SUTO®	Registered trademark of SUTO iTEC
MODBUS®	Registered trademark of the Modbus Organization, Hopkinton, USA
HART®	Registered trademark of the HART Communication Foundation, Austin, USA
Android™, Google Play	Trademarks of Google LLC

### 3 Application

The S120 Oil Vapor Monitor is designed to monitor oil contents and dew point (option) in compressed air and gases within the permissible operating parameters. These parameters can be found in the technical data section.

The S120 is mainly used in compressed air systems in industrial environment. The S120 is not developed to be used in explosive areas. To evaluate its applicability in explosive areas, please contact the manufacturer.

### 4 Features

- Measures oil vapor contents and pressure dew point (option) in compressed air and other gases.
- Easy connection through sampling hose and quick connect.
- Applicable in the permanent or portable applications.
- Measures down to 0.001 mg/m<sup>3</sup>.
- PID sensor for the highest accuracy.
- Optional dew point sensor with dual-sensor technology for high accuracy over the whole range from -100 ... +20 °C Td (option).
- Service and alarm indication through LEDs.
- Connectable to display and data logger of SUTO as well as third-party display and control units.
- IP65 casing provides robust protection in rough industrial environment.
- Optional local display for showing actual readings without extra cable connection.
- Supports multiple interfaces for signal outputs and electrical connections.




## 5 Technical data

### 5.1 Measuring parameter

Parameter	Unit	Range	Resolution	Accuracy
Oil vapor	mg/m <sup>3</sup>	0.001 ... 5.000 mg/m <sup>3</sup> *	0.001 mg/m <sup>3</sup>	5% of reading ± 0.003 mg/m <sup>3</sup>
Pressure	bar(g)	0 ... 16 bar(g)	0.01 bar(g)	0.5% FS
Temperature	°C	0 ... 50°C	0.1°C	0.5°C
Dew point (Option)	°C Td	-100 ... +20°C Td	0.1°C Td	±1°C Td (0 ... 20°C Td) ±2°C Td (-70 ... 0°C Td) ±3°C Td (-100 ... -70°C Td)

\* Based on 1000 hPa(a), 20°C, 0% relative humidity

### 5.2 General data

	
Principle of measurement	<ul style="list-style-type: none"> <li>• Photo ionization</li> <li>• Oscillating crystal (option)</li> </ul>
Sensor	<ul style="list-style-type: none"> <li>• PID (photo ionization detector)</li> <li>• Piezzo resistive pressure sensor</li> <li>• QCM + Polymer (option)</li> </ul>
Measuring medium	Compressed air and gases free of corrosive, aggressive, caustic and flammable constituents
Sample flow range	< 2 l/min, measuring gas is released to ambient
Operating temperature	-20 ... +50°C
Gas humidity	< 40% rel. humidity, no condensation
Operating pressure	3 ... 15 bar(g) (higher pressure on request)
Low pressure (optional)	0.5 ... 2 bar(g)
Housing material	PC, Al alloy
Protection class	IP65
Dimensions	See dimensional drawing on page <a href="#">11</a> .

Display (optional)	5" color touch screen with a data logger of 100 million measurement values
Weight	<ul style="list-style-type: none"><li>• 2.4 kg</li><li>• 2.58 kg (with option A1250)</li></ul>
UV lamp lifetime	6,000 working hours or 1 year, whichever comes first


### 5.3 Electrical data

Power supply	24 VDC $\pm$ 5%, 10 W
--------------	-----------------------

### 5.4 Output signals

Analog output	4 ... 20 mA
Alarm output	Relay, NO, 40 VDC, 0.2 A
Digital interface	RS-485, Modbus/RTU, Ethernet, Modbus/TCP, USB (available for display version)

## 6 Dimensional drawing

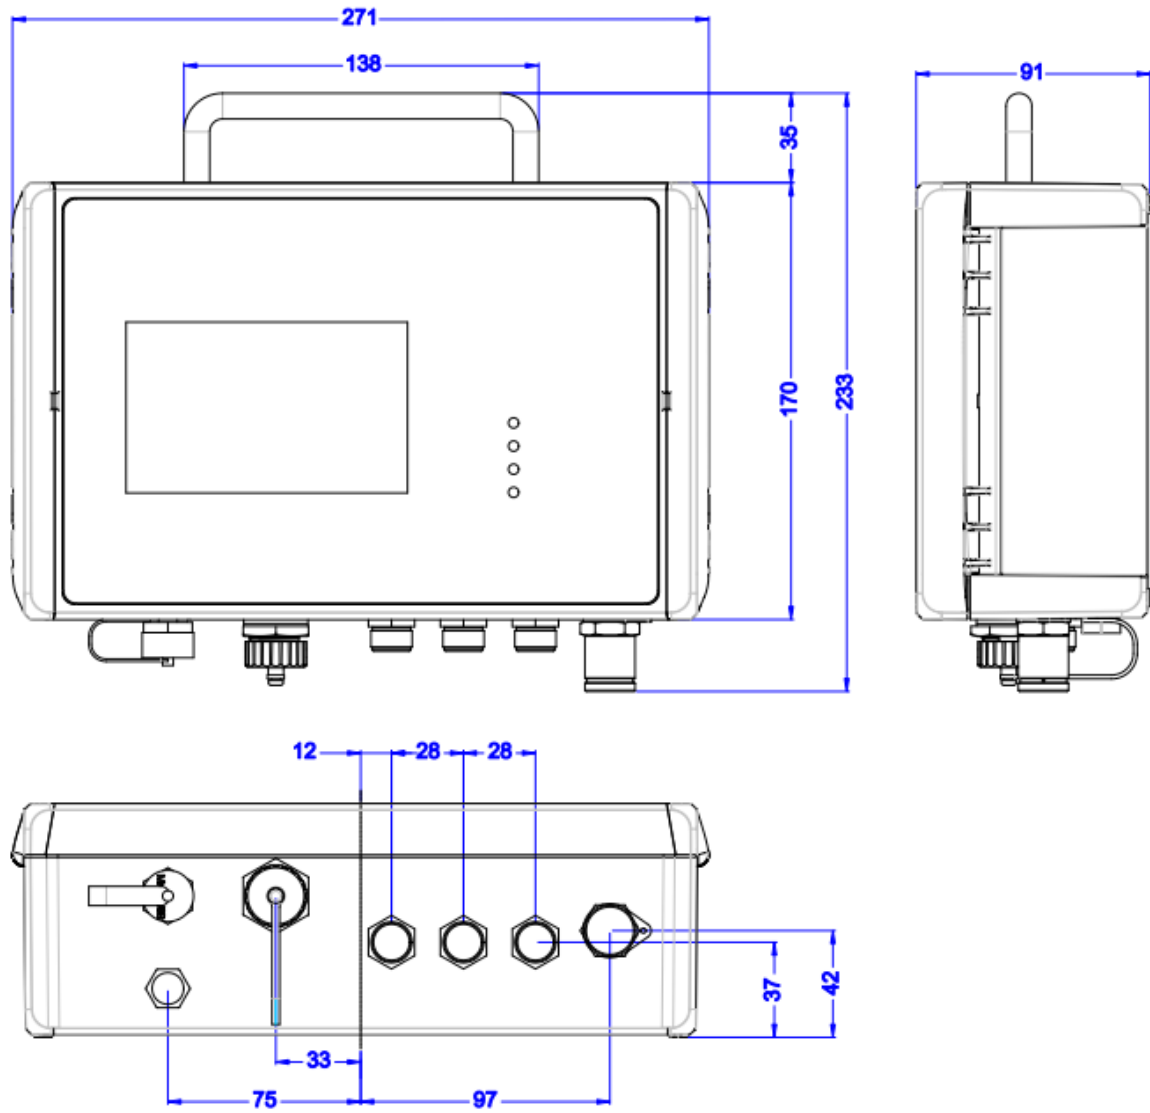

## 7 Installation

Please make sure that all components listed below are included in your package.

Qty	Description	Item No.
1	S120 Oil Vapor Monitor, or	S604 1201
	S120 Oil Vapor Monitor portable, or	S604 1202
	S120 Oil Vapor Monitor with display	S604 1203
	Option: Integrated dew point sensor, -100 ... +20 °C Td (only for S604 1203 and P604 1205)	A1250
3	M12 connectors or M12 cables (depending on orders)	Connector: C219 0059 Cable: A553 0104 / A553 0105
1	Mains unit (100 ... 240 VAC)	A554 0107
1	1.5 m teflon hose with a quick connector and a compressed air coupling at the ends	A554 3316
1	Mounting brackets	No
1	Instruction manual	No
1	Calibration certificate	No

### 7.1 Installation requirements


The S120 comes with two versions:

- S120 for stationary use. The stationary version comes with four mounting brackets which can be mounted from the backside of the instrument at each corner. This allows an easy installation at a wall.
- S120-P for portable use. The portable version comes in a transport case.


### 7.2 Wall mounting instructions

The device can be mounted on the wall using the supplied brackets. Please use one of the following dimensions to prepare your holes.

Method 1.

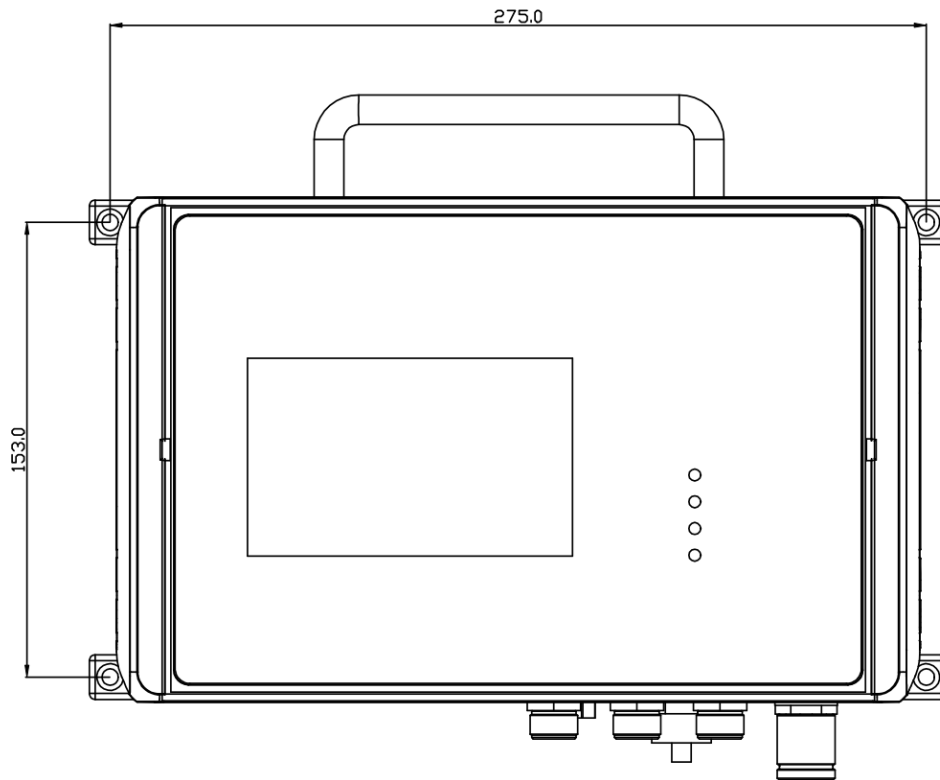

Method 2.

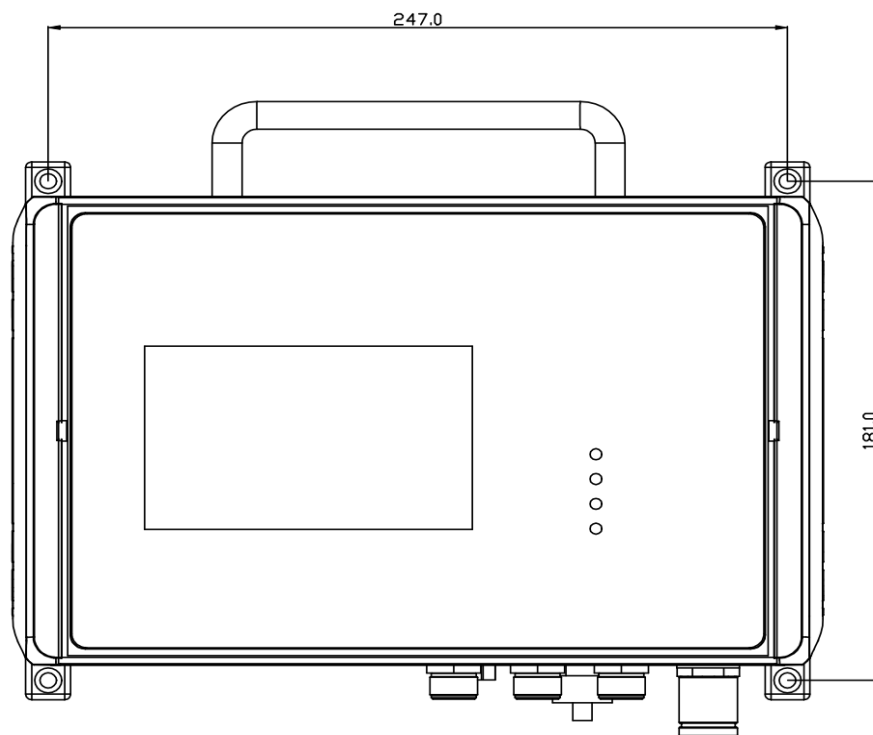

## 7.3 Installation procedure

### 7.3.1 Installation requirements

Please consider the following recommendations for a successful measurement result:

- All components from the sampling point to the S120 must be oil and grease free.
- Ambient and gas temperature must be within the specified ranges stated in section [General data](#).
- The inlet gas must be pressurized with the valid ranges.
- The sampling gas must be dry (< 40% RH) and clean.
- Ensure that valves at the sampling point are not lubricated.



#### **ATTENTION!**


**Avoid contamination with oil or grease!**

**It will lead to very slow measurement or impossible measurement results!**

- Make sure that there is no rough contaminants at the point of measurement. Steps are as follows:
  1. Connect the purge filter test kit onto your measuring point first. Open the purge valve on the test kit and purge air for a short period.
  2. Check the filter in the test kit to see whether it shows high contamination of water, oil or dust.
  3. If the filter is contaminated severely, stop using the S120 for measurement because this may lead to serious damage to the device. In case you are not sure, please contact the manufacturer.

**ATTENTION!**

**Before you connect the device to your point of measurement, make sure that there is no rough contamination like water/oil drops or heavy dust. This may damage the sensor units. For this please use the purge filter test kit.**

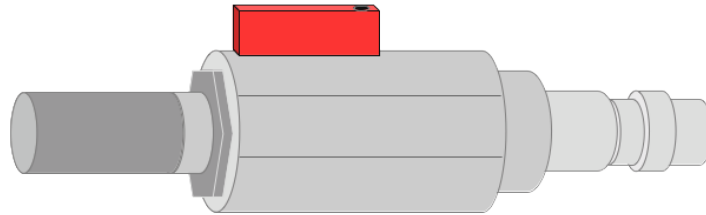

### 7.3.2 Installation steps

The following steps explain the procedure of an appropriate installation.

Most importantly, before you connect S120 to the compressed air, purge air out from the measuring point to remove any residual contamination using the purge filter test kit.



1. Connect the teflon hose with the inlet of the S120 as shown in the picture.




2. Connect the other end of the teflon hose with a quick connector. The teflon hose with quick connector is used to connect the S120 to the process.



## 7.4 Electrical connection

The S120 provides 3 kinds of electrical connections by the following interfaces:

- One USB port
- One RJ-45 connector
- Three M12 connectors

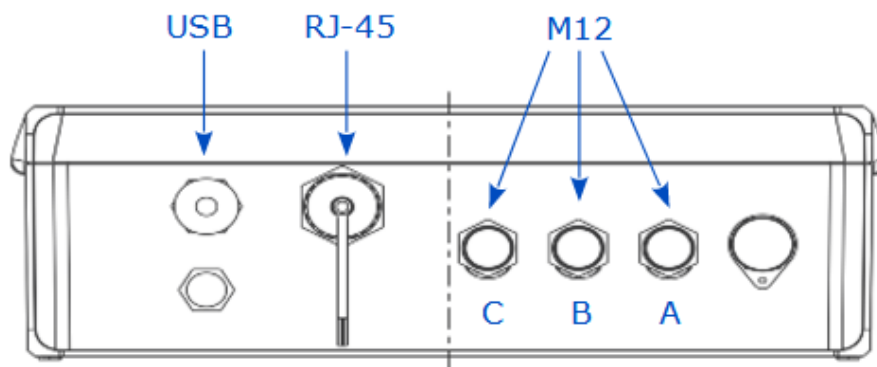

### 7.4.1 USB port

The USB port is used to import or export files.

Through the USB port, the S120 can be connected with:

- An OTG memory stick: To import firmware for upgrade and to export data.
- A PC where data analysis software such as S4A is installed: To export data to the PC for analysis.

### 7.4.2 RJ-45 connector

The RJ-45 connector is used as an Ethernet port for IP networking.

Through this connector, the S120 connects to the TCP/IP network over the Modbus/TCP protocol.

### 7.4.3 M12 connectors

The 3 M12 connectors are used to connect to display units from SUTO or the third-party displays and control units.


Also, the S120 is powered through these connectors.

Connection to the following external display units from SUTO.

S120		Color code	S330/S331		S320	
Pin	Signal		Terminal	Pin	Terminal	Pin
A.1	SDI	brown	A	1	G	6
A.2 / B.2	-V <sub>b</sub>	white		2		7
A.3 / B.3	+V <sub>b</sub>	blue		3		8
C.4	D+	black		4		
C.5	D-	grey		5		
B.1	PE	brown		GND		
A.1	SDI	brown	B	1		
A.2 / B.2	-V <sub>b</sub>	white		2		
A.3 / B.3	+V <sub>b</sub>	blue		3		
C.4	D+	black		4		
C.5	D-	grey		5		
B.1	PE	brown		GND		

## S120 without display - M12 pin assignment

Connector	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5
A	SDI	$-V_b$	$+V_b$	D+	D-
B	PE	$-V_b$	$+V_b$	+I	-I
C	Relay	Relay	GND	D+	D-
Color	Brown	White	Blue	Black	Gray

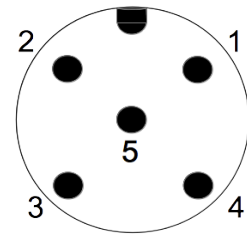

## S120 with display - M12 pin assignment

Connector	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5
A	SDI	$-V_b$	$+V_b$	NA	NA
B	PE	$-V_b$	$+V_b$	+I	-I
C	Relay	Relay	GND	D+	D-
Color	Brown	White	Blue	Black	Gray

**Legend to pin assignment**

SDI	Digital signal (internal use)
$-V_B$	Negative supply voltage
$+V_B$	Positive supply voltage
+I	Positive 4 ... 20 mA signal
-I	Negative 4 ... 20 mA signal
D+	RS-485, Modbus/RTU
D-	RS-485, Modbus/RTU
Relay	Alarm output
PE	Earth connection
GND	Communication ground
NA	Not available

## 8 Configuration

The S120 is delivered with standard ex-work configuration or with specific customer settings according to the order.

### Standard ex-work configuration

---

Scaling	: 4 mA = 0.000 mg/m <sup>3</sup> 20 mA = 5.000 mg/m <sup>3</sup>
Alarm	: 1.000 mg/m <sup>3</sup> , up
Oil type	: Isobutene
Modbus	: Device address = Last two digits of the serial number Baud rate = 19200 Framing/parity/Stop bit = 8, N, 1 Transmission mode = RTU

---

You can use one of the following ways to configure S120.

### 8.1 Integrated display

See Chapter [Operations using the integrated display](#).


### 8.2 External display device

See the S330/S331 Instruction Manual.

### 8.3 Service kit

Please ensure that S120 or the service kit is connected with the power supply because the USB port cannot supply enough power for both of them.

For more information, refer to the instruction manual of Service Kit.

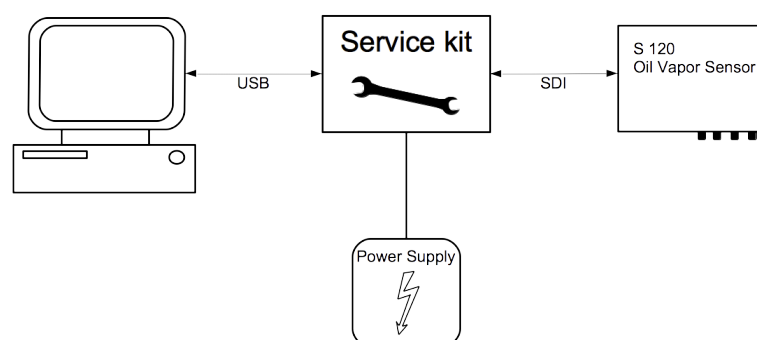


## 9 Operations using the integrated display

If your S120 is equipped with the optional integrated display, you can configure the device by using the display.

This chapter describes the usage of the display and provides instructions on how to configure the device .

### 9.1 User interface

The screen below shows the user interface of the S120.

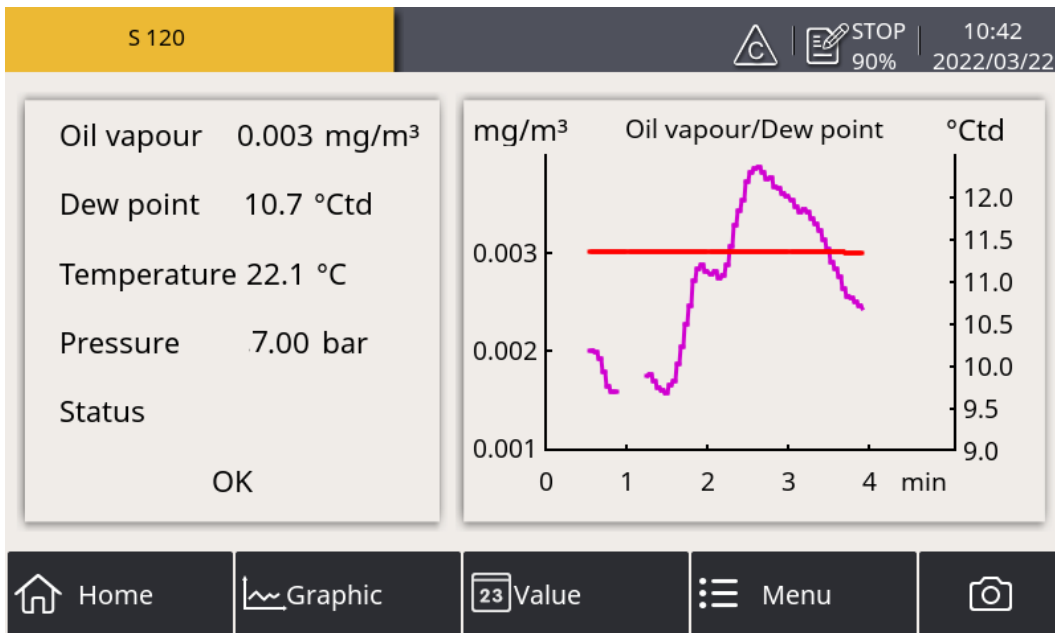

#### 9.1.1 Main screen

- On the left side the online measuring values are shown:
  - **Oil vapor:** Oil vapor content per cubic meter at reference condition
  - **Dew point:** pressure dew point (optional, only shown if the dew point option is chosen.)
  - **Temperature:** Medium temperature
  - **Pressure:** System pressure
  - **Status:** Sensor status (for service)
- On the right side the online graphic view is shown.









### 9.1.2 Quick buttons

The quick buttons and their functions are described below.

<b>Home</b>	To return to the home view which is shown above.
<b>Graphic</b>	To show the graphic in full screen.
<b>Value</b>	To show the values in full screen.
<b>Menu</b>	To configure the sensor and other device settings. For more information, see Section <a href="#">Main menus</a> .
<b>Camera</b>	To capture an image of the current screen and store it in the memory for any future retrieve through the S4A data logger software.


### 9.1.3 Status bar

Description of icons displayed in the status bar.

	USB stick connected		System error
	Sensor connection has changed, not matching with configuration		Sensor unit is not matching with configuration
	Logger status		RTC backup battery status
	Sensor calibration is expired		Alarm triggered

## 9.2 Main menus

After you click the **Menu** button, the following screen appears displaying all operating menus.

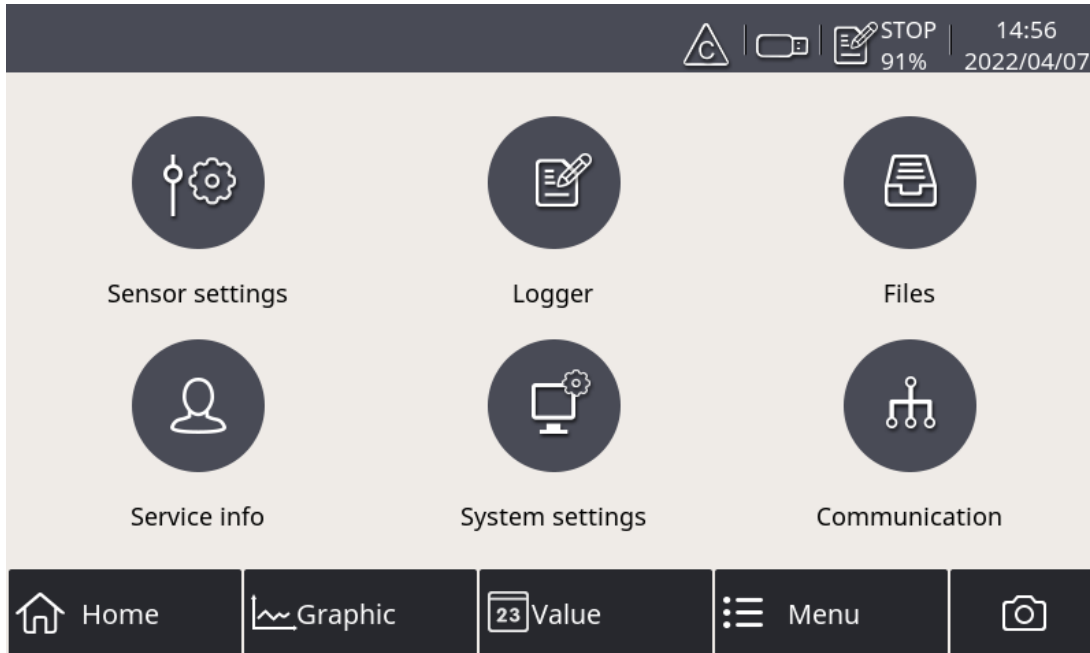

The main menus and their functions are described below.


<b>Sensor settings</b>	To view and check the S120 settings.
<b>Logger</b>	To view and change S120 data logger settings.
<b>Files</b>	To check all recorded files and the memory status.
<b>Service info</b>	To view useful information in case of a service issue.
<b>Service setting</b>	To view service related settings.
<b>Communication</b>	To configure the field bus RS-485 and Ethernet Modbus/TCP.

### 9.3 Sensor settings

To configure sensor settings before starting measurement.

After you changes settings, click "Save" to have the changes saved in the S120.

#### 9.3.1 Basic setting

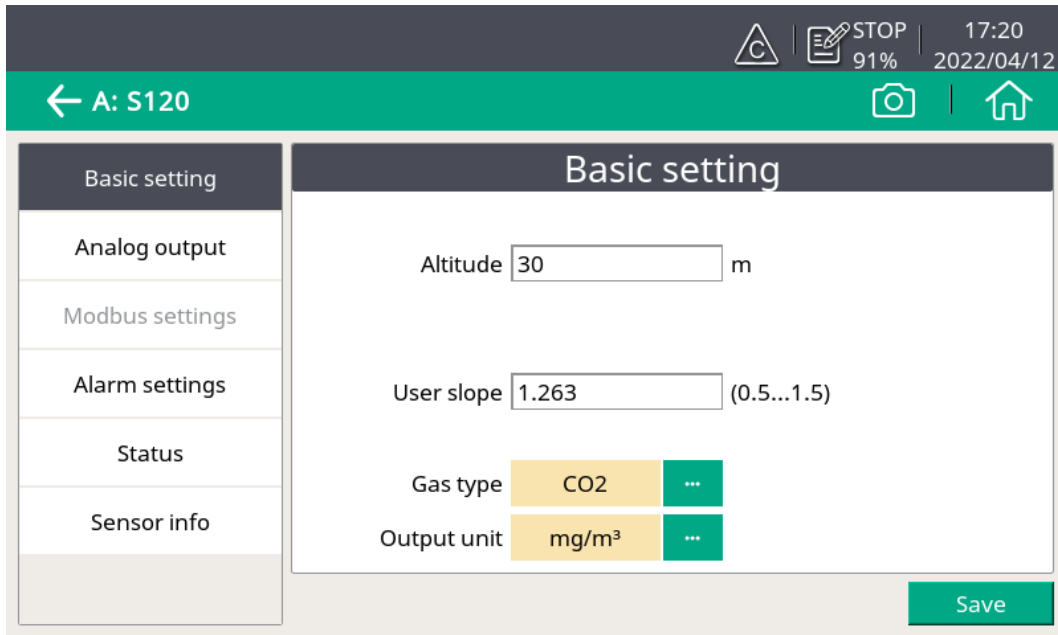


<b>Altitude</b>	To enter the Altitude. To accurately measure oil vapor, enter the altitude where the device is placed. Valid values are only positive. If you are in a location where the real altitude is negative, enter 0 instead of a negative value.
<b>User slope</b>	To enter a value in the value range. Usually, enter 1.0.
<b>Gas type</b>	To select the gas type from Air, N <sub>2</sub> , and CO <sub>2</sub>
<b>Output unit</b>	To select the desired output unit.




### 9.3.2 Analog output

To configure the scaling of analog output. Whenever the output unit is changed, it is recommended to adjust the scaling of the analog output.

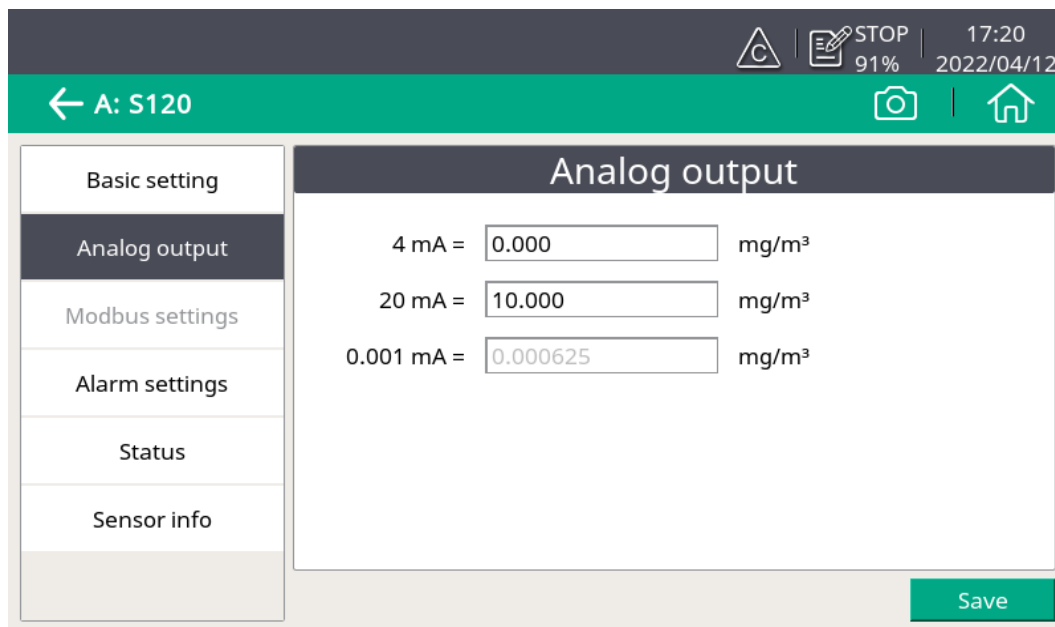


### 9.3.3 Alarm settings

To configure the threshold of oil vapor that triggers the alarm.

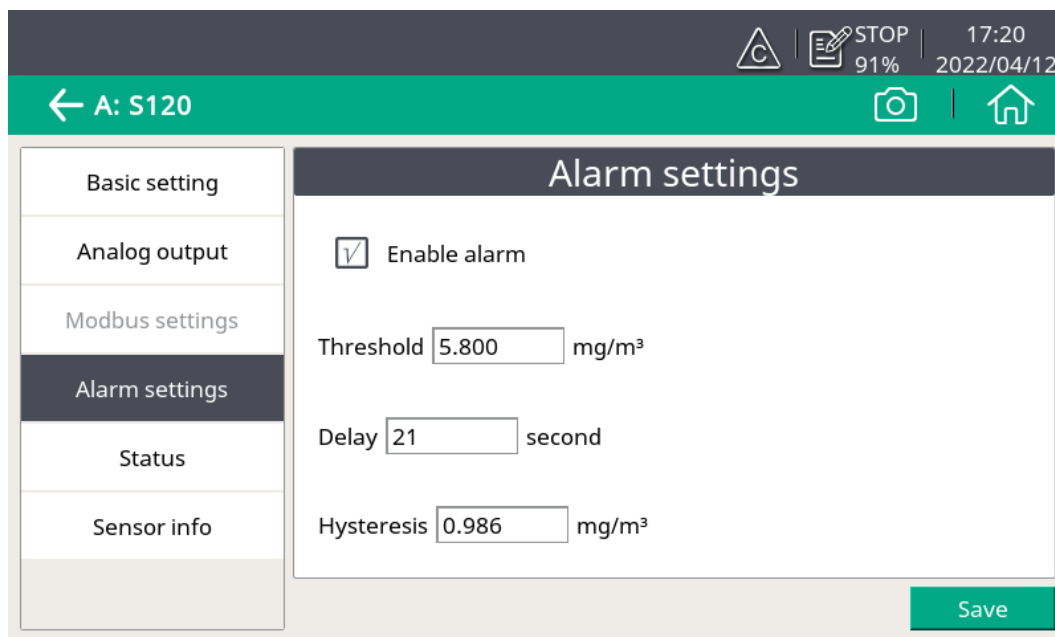


### 9.3.4 Status

To check the device status in case of a service issue.

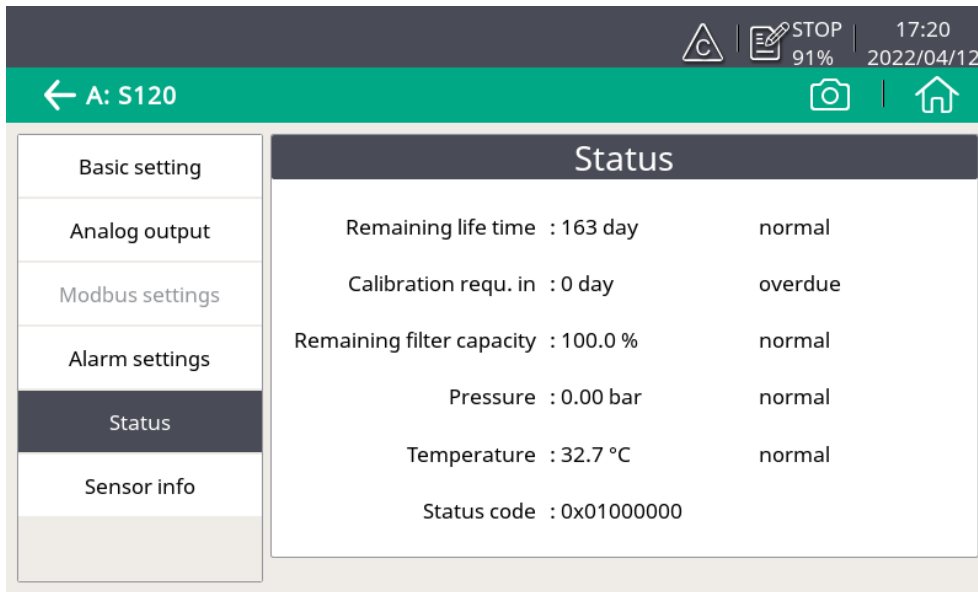

### 9.4 Logger settings

To view and change the logger settings and status.

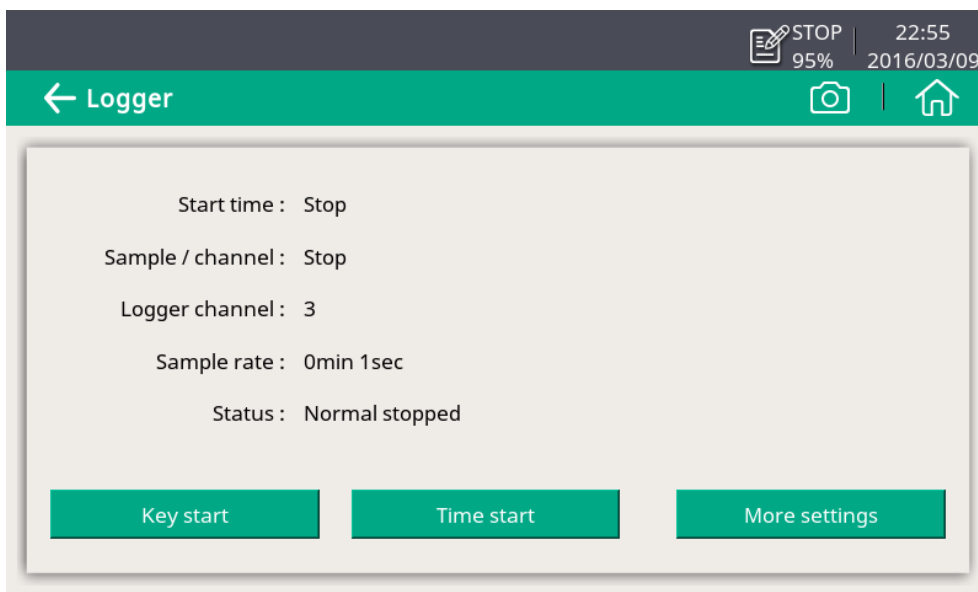


<b>Start time</b>	Logger start time
<b>Sample / Channel</b>	Recorded sample number per logging channel
<b>Logger channel</b>	Total recording channel number
<b>Sample rate</b>	Recording interval
<b>Status</b>	Logger status

Recorded data can be downloaded to an USB memory drive on site (USB OTG Drive) or can be transferred to a PC using the supplied USB cable and the software S4A.


### 9.5 Files

To view and manage all recorded measurement files and screenshots.  
 To view the available memory.

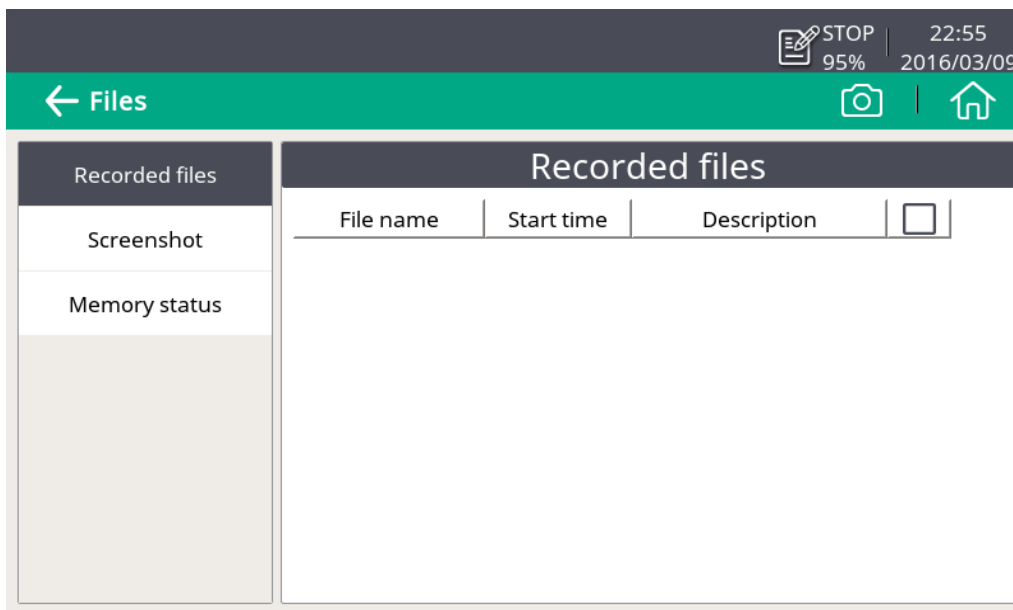


### 9.6 Service info

To view the contact information of the company that provides the service.

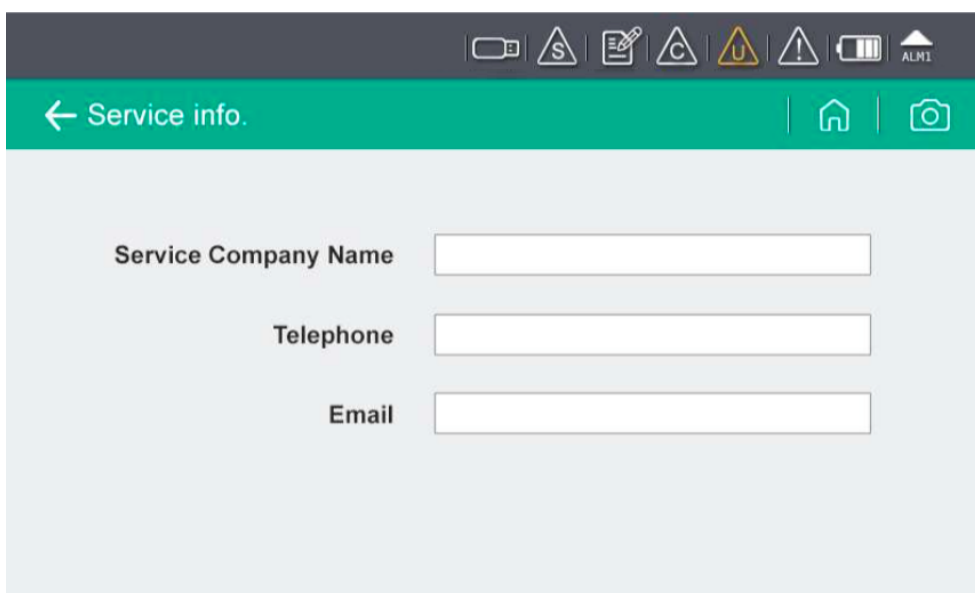

## 9.7 System settings


To view and change S120 system-level settings.

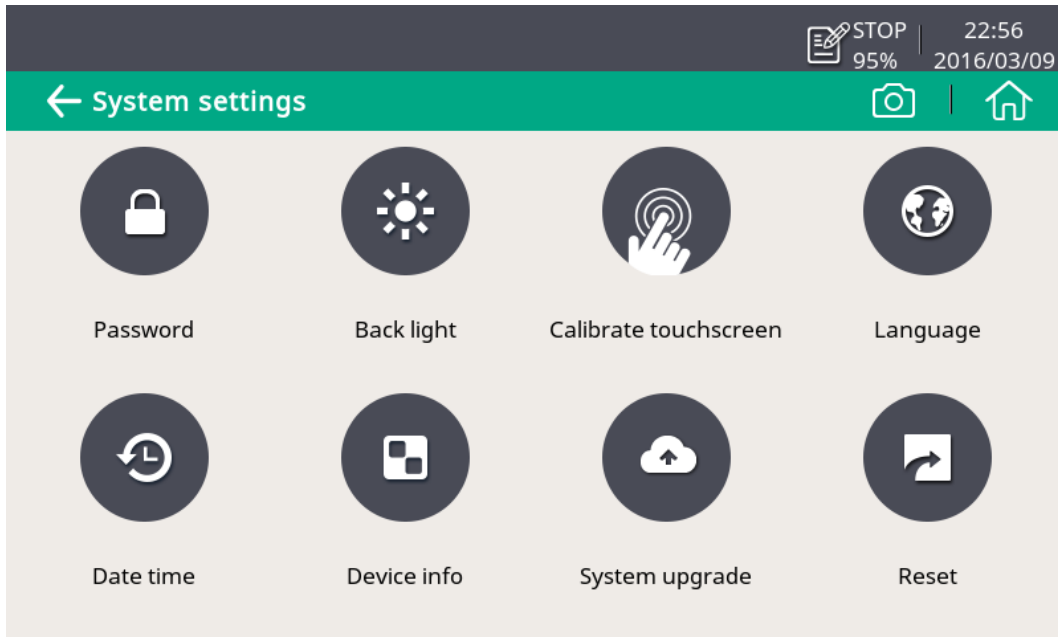

<b>Password</b>	To set the password to protect some critical operations from unauthorized access.
<b>Back light</b>	To adjust brightening and dimming time out.
<b>Calibrate touch screen</b>	To calibrate touch accuracy
<b>Language</b>	To select the user interface language
<b>Date time</b>	To set the date and time
<b>Device info</b>	To show information for service cases
<b>System upgrade</b>	To upgrade the system.
<b>Reset</b>	To reboot the display.


## 9.8 Communication

To configure the field bus RS-485 and Ethernet Modbus/TCP.

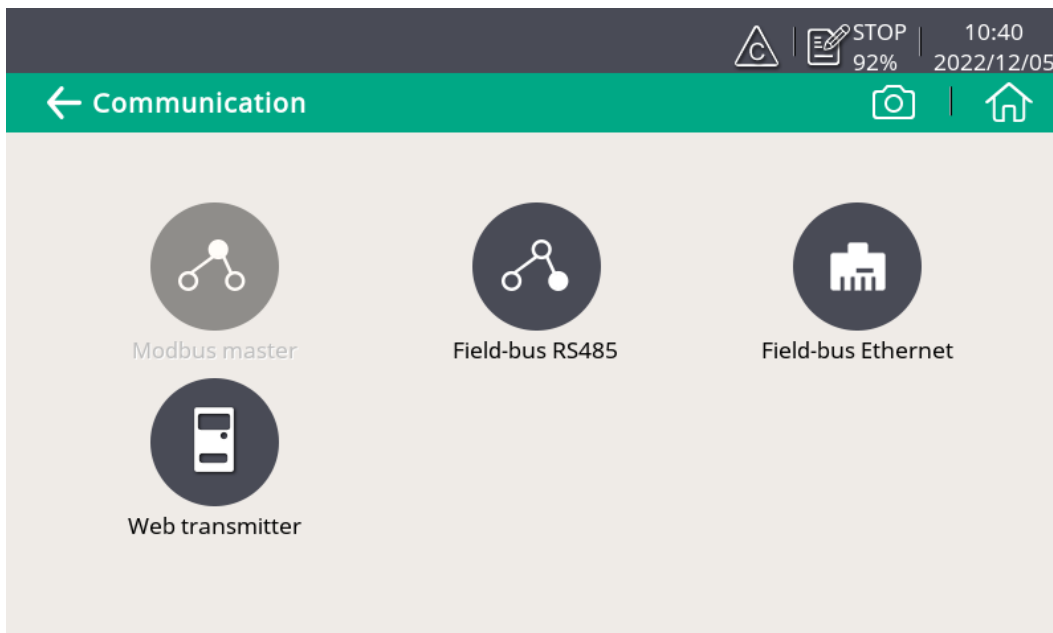


### 9.8.1 Modbus/RTU settings

To change the Modbus/RTU settings.

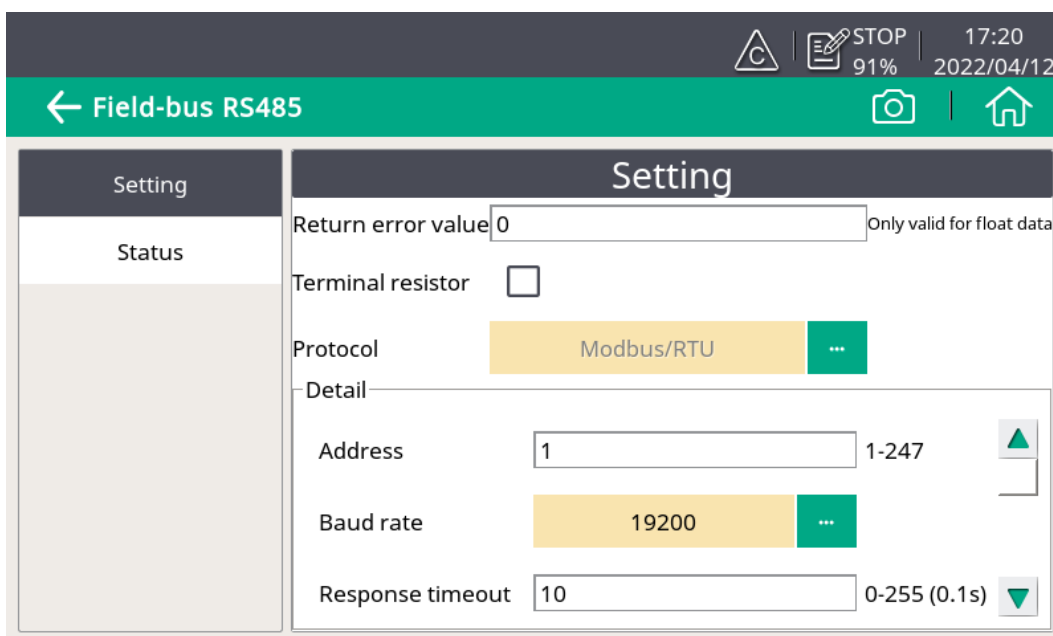

### 9.8.2 Modbus/TCP settings

To change the Modbus/TCP settings.

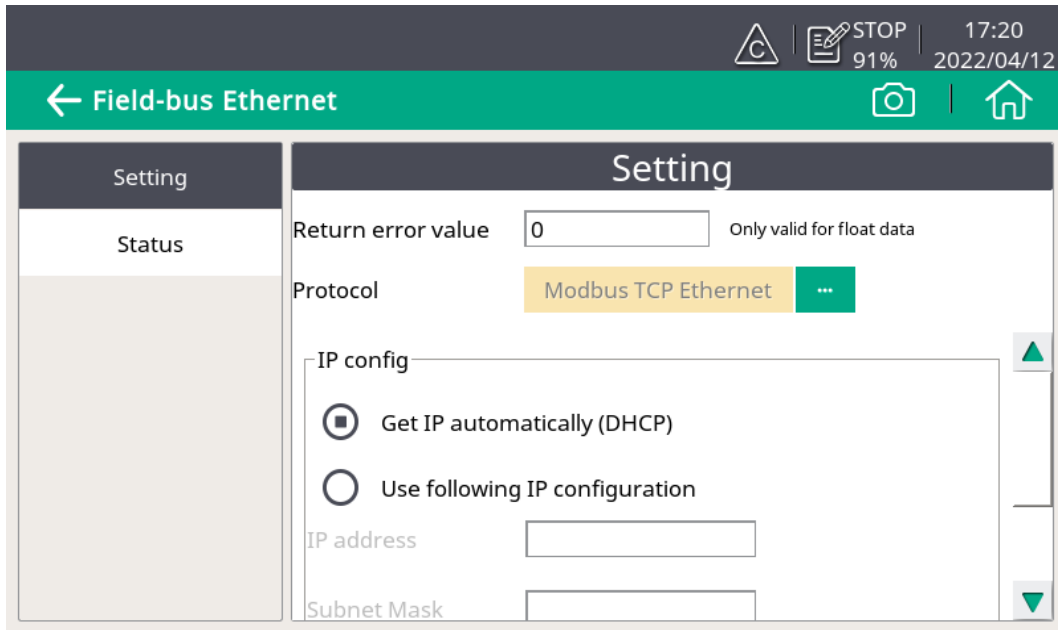

## 10 Troubleshooting

This chapter describes how to troubleshoot S120 based on error indications such as LED indicators, relay status, and current output.

### 10.1 LED indicators

<b>● Power</b>	Indicates the power status.
<b>● Alarm</b>	Indicates the alarm status.
<b>● Service Sensor</b>	Indicates whether the sensor need to be serviced.
<b>● Service Filter</b>	Indicates whether the service filter need to be replaced.

LED indicator	Status	Causes	Action
Service Filter	Flashing	Filter capacity is less than 10%	N/A
	On	Filter capacity is less than 1%	Contact the manufacturer for filter replacement.
Service Sensor	Flashing	<ul style="list-style-type: none"> <li>The UV lamp life time is less than 30 days.</li> <li>The valid time for the sensor calibration is less than 30 days.</li> </ul>	N/A
	On	<ul style="list-style-type: none"> <li>The UV lamp life time will expire in one day or has expired.</li> <li>The sensor calibration expires.</li> </ul>	Contact the manufacturer for UV lamp replacement or for calibration service

## 10.2 Error indications

This table lists the main error indications with S120 and the corresponding instructions to locate and fix errors.

When the alarm LED is on,

1. Measure the current output and relay status.
2. Refer to the following table to proceed.

<b>Error indications</b>	<b>Possible causes</b>	<b>Action</b>
All LEDs are on	The internal communication is down.	Contact the manufacturer.
<ul style="list-style-type: none"> <li>• Alarm LED is on</li> <li>• Relay is open</li> <li>• Current output = normal (4 ... 20 mA)</li> </ul>	<ul style="list-style-type: none"> <li>• Over threshold</li> <li>• UV lamp life time expired</li> <li>• Calibration expired</li> <li>• Filter capacity &lt; 1%</li> </ul>	Check the Service Sensor LED and Service Filter LED to locate the problem.
<ul style="list-style-type: none"> <li>• Alarm LED is on</li> <li>• Relay is open</li> <li>• Current output = 3.5 mA</li> </ul>	<ul style="list-style-type: none"> <li>• Low temperature</li> <li>• Auto-calibration failed</li> <li>• Inner communication failed</li> </ul>	Increase the temperature and if the error indications persist, contact the manufacturer.
<ul style="list-style-type: none"> <li>• Alarm LED is on</li> <li>• Relay is open</li> <li>• Current output = 21 mA</li> </ul>	<ul style="list-style-type: none"> <li>• High temperature</li> </ul>	Check the environment conditions and improve accordingly.
<ul style="list-style-type: none"> <li>• Alarm LED is off</li> <li>• Relay is closed</li> <li>• Current output = 3.5 mA</li> </ul>	<ul style="list-style-type: none"> <li>• High pressure</li> <li>• Low pressure</li> </ul>	
<ul style="list-style-type: none"> <li>• Alarm LED is off</li> <li>• Relay is closed</li> <li>• Current output = 21 mA</li> </ul>	Over range	



## 11 Signal outputs

### 11.1 Analog output

The S120 has an analog output range of 4 ... 20 mA. This output is scaled to:

- 4 mA = 0.000 mg/m<sup>3</sup>
- 20 mA = 5.000 mg/m<sup>3</sup>

### 11.2 Modbus Interface

The default settings of the Modbus interface are as follows:

#### Communication parameters (Modbus/RTU)

Baud rate	: 19200
Device address	: Last digits of serial number
Framing / parity / stop bit	: 8, N, 1
Response time	: 1 second
Response delay	: 0 ms
Inter-frame spacing	: 7 char

#### Communication parameters (Modbus/TCP)

DHCP	: Yes
MAC	: Set ex-factory
IP address	: Dynamic or Static
Subnet	: Dynamic or Static
Gateway	: Dynamic or Static
Timeout	: ≥ 200 ms

#### Response message that the device returns to the master:

- Function code: 03

The information for the byte order is shown in the table below:

Byte Order	Sequence				Data Type
	1st	2nd	3rd	4th	
1-0-3-2	Byte 1 (MMMMMMMM*)	Byte 0 (MMMMMMMM *)	Byte 3 (SEEEEEEE)	Byte 2 (EMMMMMMM *)	FLOAT
1-0-3-2	Byte 1	Byte 0 LSB	Byte 3 MSB	Byte 2	UINT32 INT32
1-0	Byte 1 MSB	Byte 0 LSB	---	---	UINT16 INT16
1-0	Byte 1 XXX *	Byte 0 DATA	---	---	UINT8 INT8

\*S: Sign, E: Exponent, M: Mantissa, XXX: no value

**Erklärungen zur MSB und LSB**

**MSB** MSB steht für Most Significant Byte first (höchstwertiges Byte zuerst) und folgt der Big-Endian-Byte-Order.  
 Zum Beispiel, wenn das Hauptsystem der Reihenfolge MSB first (Big-Endian) folgt:  
 Wenn die 4-Byte-Gleitkommazahl vom Slave (Sensor) in der Reihenfolge Byte1-Byte0-Byte3-Byte2 empfangen wird, muss der Master die Byte-Reihenfolge in Byte3-Byte2-Byte1-Byte0 ändern, damit der Wert korrekt angezeigt wird.

**LSB** LSB steht für Least Significant Byte first und folgt der Little-Endian-Byte-Order.  
 Wenn z. B. das Hauptsystem der LSB-Reihenfolge (Little Endian) folgt:  
 Wenn die 4-Byte-Gleitkommazahl vom Slave (Sensor) in der Reihenfolge Byte1-Byte0-Byte3-Byte2 empfangen wird, muss der Master die Byte-Reihenfolge in Byte0-Byte1-Byte2-Byte3 ändern, damit der Wert korrekt angezeigt wird.

**Modbus holding registers (read-only)**

Modbus register address	Data type	Data length	Channel description	Unit	Resolution
0	FLOAT	4-Byte	Gas temperature	°C	0.1
2	FLOAT	4-Byte	Oil vapor content	mg/m <sup>3</sup> ppm	0.001
4	FLOAT	4-Byte	Pressure	bar	0.1
6	FLOAT	4-Byte	Remaining life time	day	1
8	FLOAT	4-Byte	Remaining filter capacity	%	0.1
10	UINT32	4-Byte	System status	-	1
12	FLOAT	4-Byte	Sensor output	mV	0.001
20	FLOAT	4-Byte	Dew point	°C Td	0.1

**Interpretation of system status**

The device provides the device statuses via Modbus as well. The 32-bit data information is read as single bits. The meanings of these bits are described as follows.

Bit	Description	Bit	Description
0	Alarm triggered at oil vapor channel	8	Pressure too low
1	Oil vapor content over range	9	Pressure too high
2	Calibration will overdue soon	10	Temperature too low
3	Calibration overdue	11	Temperature too high
4	Sensor life time will overdue soon	12	Inner communication failed
5	Sensor overdue	13	Sensor signal is too small
6	Filter will overdue soon	14	Sensor signal is too high
7	Filter overdue		

### 11.3 Alarm output

The S120 has a relay alarm output. It is possible to monitor such as the oil vapor content and give an alarm at a particular threshold value.

**Alarm relay specifications:**

Rating: 40 VDC, 0.2 A

Power-off state: NO (normally open)


Default threshold value: 1.0 mg/m<sup>3</sup>

Please find the different states in the table below.

Situation	Relay state	Alarm LED
S120 is powered off	OPEN	OFF
S120 is powered on / no alarm value is reached	CLOSED	OFF
S120 is powered on / alarm value is reached	OPEN	ON

The advantage of the normally open relay is, that both critical situations can be detected, not only if the alarm value is reached, also if the device has power loss.

To power on an external buzzer or alarm light with the device, you need to invert the signal. For this an external alarm circuit is needed in addition. See the example below.

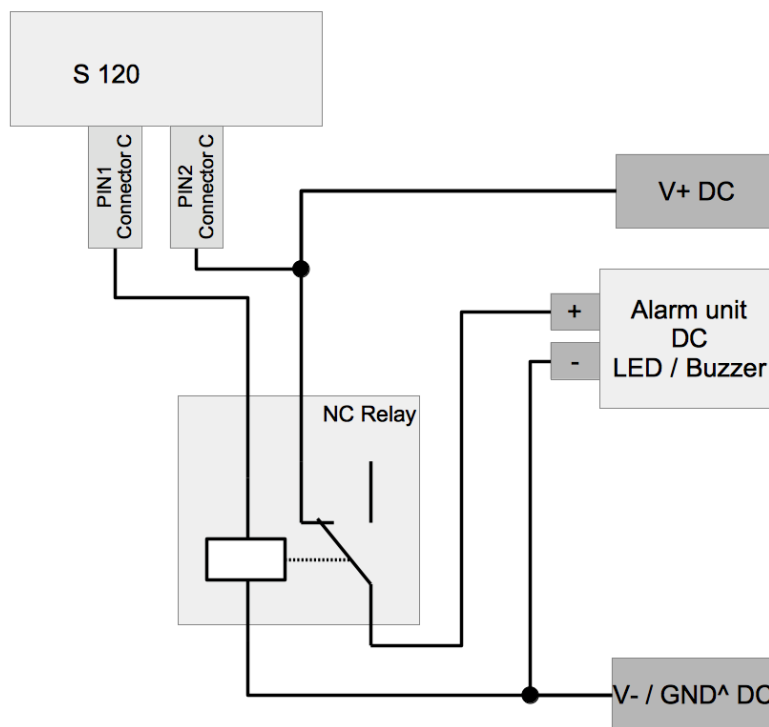

## 12 Optional accessories

### 12.1 Sensor display

The sensor display enables you to view the actual values and error messages and change settings.

The sensor display comes with a data logger that can store 100 million measurement values.

### 12.2 Service kit

The service kit enables you to configure an S120 that is not equipped with the local display. For more information, see section 8.3 [Service kit](#).

## 13 Calibration

The sensor is calibrated before delivery. The calibration date is printed on the certificate which is supplied together with the sensor.

The accuracy of the sensor is regulated by the on-site conditions. Parameters such as oil, high humidity or other impurities can affect the calibration and furthermore the accuracy. It is recommended to calibrate the sensor at least once per year. The calibration is excluded from the instruments warranty. To request the calibration service, please contact the manufacturer.



#### **ATTENTION!**

**Please save all your measurement data on an external device before returning the instrument to calibration and service. It might be necessary to reset the displays storage during calibration and service.**

## 14 Maintenance

To clean the sensor and its accessories, you are recommended to use moist cloth only.



#### **ATTENTION!**

**Do not use isopropyl alcohol to clean the display!**

## 15 Disposal or waste



Electronic devices are recyclable material and do not belong in the household waste.

The sensor, the accessories and its packings must be disposed according to your local statutory requirements.

The dispose can also be carried by the manufacturer of the product, for this please contact the manufacturer.

## 16 Warranty

Please find the warranty as a separated warranty card included with the instrument delivery.

The warranty does not cover any wear parts or consumables, therefore the UV lamp with limited lifetime as well as the internal filter are not covered by the warranty.



---

**SUTO iTEC GmbH**

Grißheimer Weg 21  
D-79423 Heitersheim  
Germany

Tel: +49 (0) 7634 50488 00  
Email: [sales@suto-itec.com](mailto:sales@suto-itec.com)  
Website: [www.suto-itec.com](http://www.suto-itec.com)

---

**SUTO iTEC (ASIA) Co., Ltd.**

Room 10, 6/F, Block B, Cambridge Plaza  
188 San Wan Road, Sheung Shui, N.T.  
Hong Kong

Tel: +852 2328 9782  
Email: [sales.asia@suto-itec.com](mailto:sales.asia@suto-itec.com)  
Website: [www.suto-itec.com](http://www.suto-itec.com)

---

**SUTO iTEC Inc.**

5460 33rd St SE  
Grand Rapids, MI 49512  
USA

Tel: +1 (616) 800-7886  
Email: [sales.us@suto-itec.com](mailto:sales.us@suto-itec.com)  
Website: [www.suto-itec.com](http://www.suto-itec.com)